

Micrometer Adjustable Torque Wrench 2-24 NM

Operating Instructions:

1. Hold the torque wrench in your hand with the torque scale in front of you.
2. Set the amount of torque in Newton-Meter (=NM) by turning the handle until the desired torque is reached.
The adjustable torques range from 2-24NM. The red needle indicates the preset torque value.
3. Now the torque wrench is set to a specific torque value and is ready to use.
4. Install the correct socket or other attachment to the square drive and pull on the wrench until you feel and/or hear a click.
5. Remove the socket by pressing the button on the top.
6. After use, adjust the wrench to its lowest setting (not below 2NM).

Do not continue to pull on the wrench after you have felt or heard the click. At low torque settings, make sure that you feel or hear the click.

Caution:

1. If the torque wrench has not been used or has been in storage for some time, operate it several times at a low torque setting. This will allow the special lubricant to recoat the internal working parts.
2. Do not adjust the torque wrench below 2NM or over 24NM.
3. Do not continue to pull on the wrench after the preset torque has been reached (click).
4. Clean the torque wrench with a dry and clean cloth. Never use a cleaning liquid.
5. The torque wrench was calibrated and tested before leaving the factory and is accurate to $\pm 4\%$.
6. This is a precision measuring instrument and should be treated with care. Calibration and services should be done regularly.

Drehmomentschlüssel-Set 2-24 NM




Gebrauchsanweisung:

1. Halten Sie den Drehmomentschlüssel so in der Hand, dass Sie die Skala gut im Blick haben.
2. Durch Drehen des unteren Griffteils (Drehgriff) können Sie das gewünschte Drehmoment in Newton-Meter (NM) einstellen. Der Verstellbereich liegt zwischen 2-24 NM. Der rote Balken gibt den eingestellten Wert des Drehmoments an.
3. Sobald das Drehmoment richtig eingestellt ist, kann er verwendet werden.
4. Stecken Sie den gewünschten Aufsatz auf den Vierkant und drehen Sie den Griff so lange, bis Sie ein Klickgeräusch hören.
5. Entfernen Sie den Aufsatz, indem Sie den Knopf am oberen Ende des Drehmomentschlüssels betätigen.
6. Nach Benutzung des Schlüssels den Drehgriff zur Entlastung der Mechanik bis zum niedrigsten Einstellwert zurückdrehen (nicht unter 2 NM).

Beenden Sie den Schraubanzug sofort bei Erreichen des Drehmomentwertes (Klickgeräusch). Bei niedrig eingestellten Drehmomentwerten ist das fühl- und hörbare Klicksignal schwächer.

Wichtige Hinweise:

1. Nach längerer Nichtbenutzung stellen Sie ein niedriges Drehmoment ein, betätigen Sie den Schlüssel einige Male, um das Schmiermittel in der Mechanik zu verteilen.
2. Stellen Sie den Drehmomentwert niemals unter 2 NM oder über 24 NM ein.
3. Bei Erreichen des Drehmomentwertes ist der Schraubanzug sofort zu beenden.
4. Reinigen Sie den Drehmomentschlüssel nur mit einem trockenen Tuch. Verwenden Sie niemals Reinigungsflüssigkeit.
5. Der Drehmomentschlüssel wurde geeicht und getestet. Die Auslösegenauigkeit beträgt $\pm 4\%$ vom Skalenwert.
6. Der Drehmomentschlüssel ist ein präzises und zugleich sensibles Messwerkzeug, das mit Vorsicht verwendet werden sollte. Warten Sie den Drehmomentschlüssel regelmäßig.

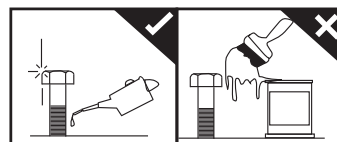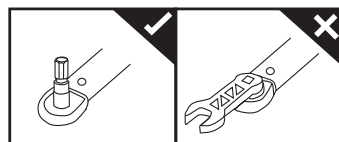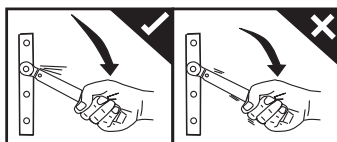

Made in Taiwan

